

4T60-E / 4T65-E Transmission Range (Gear Position) Switch 7-pin connector electrical interface to Fiero

Pin	Circuit	Wire/Color	Action	Description
A	ground park output	varies	not needed	<i>(supplies a ground output in park only)</i>
B	switched 12v+ input	varies	connect to	dark blue wire coming from pin C1 of the Fiero's C500 connector
C	12v+ park output	varies	not needed	<i>(supplies a switched 12v + ignition power output when in park only)</i>
D	ground input	black	connect to	engine block or transmission case ground
E	start/crank output	large purple	connect to	starter solenoid terminal (smallest of the 3 terminals on the starter solenoid)
F	backup lights output	lt green	connect to	light green wiring coming from pin E1 of the Fiero's C500 connector
G	start/crank input	large yellow	connect to	large yel wire coming from pin A4 or large ppl wire coming from pin E2 of the Fiero's C500 connector

Fiero C500 pin ID/usage may differ

Copyright 2010 Sinister Performance, LLC. www.gmtuners.com USE AT YOUR OWN RISK!